

JVC U.S.A.

Customer Care Center 1-800-252-5722

CUSTOMER PROCEDURE**"Chk Wiring then reset unit" message scrolls on display when unit is powered ON**

KD-R320J	KD-R420J	KD-R520J	KD-HDR44J	KD-BPT30J	KD-R328J
KD-R428J	KD-R528J	KD-BTP50J	KD-A525J	KD-A625J	KD-R620J
KD-R628J	KD-AHD79J	KD-HDR70J	KW-HDR720J		

Cause

The wires were shorted during installation.

Cure

1. Remove the Radio and disconnect the Harness.
2. Verify the Units wiring and ensure there are no shorts.
 - Check for misconnection (for example; DC12V to Left speaker negative to reverse signal)
 - Check for loose connections
 - Check for uncovered connections
3. Clear the error using the procedure below.

PROCEDURE

Apply this procedure after verifying the units wiring.

It is NOT possible to clear the error message if the wiring problem has not been corrected.

1. Remove wiring harness from unit (remove all DC power).
2. Simultaneously press and hold the [MENU] and [UP arrow] button.
3. While holding [Menu] / [Up arrow] buttons, insert the unit's wiring harness (reapply DC power to the unit).
 - a. "DC ERR" will be displayed.
 - b. If "Chk wiring..." message reappear, retry steps 1-3 again.



4. Press the [Up arrow]; "DC1 ERR" may be displayed.



5. Press and Hold the [Up arrow] to clear any error; "DC1 OK" will display.



6. Press the [Down arrow], "DC2 *" will display.
a. " * " will be a number 0 to 4



7. Press and Hold the [Down arrow] to clear any error; "DC2 0" will display.



8. Remove the wiring harness from the unit (remove all DC power).
9. Remove the units Faceplate.
10. Insert the unit's wiring harness (reapply DC power to the unit).
11. Press the [Reset] button on the unit to reset it.
12. Reinstall the units Faceplate and Power ON the unit.
- a. Operation should be restored.
 - b. If "Chk wiring..." occurs again, the unit maybe defective. Contact a JVC authorized service center for assistance.